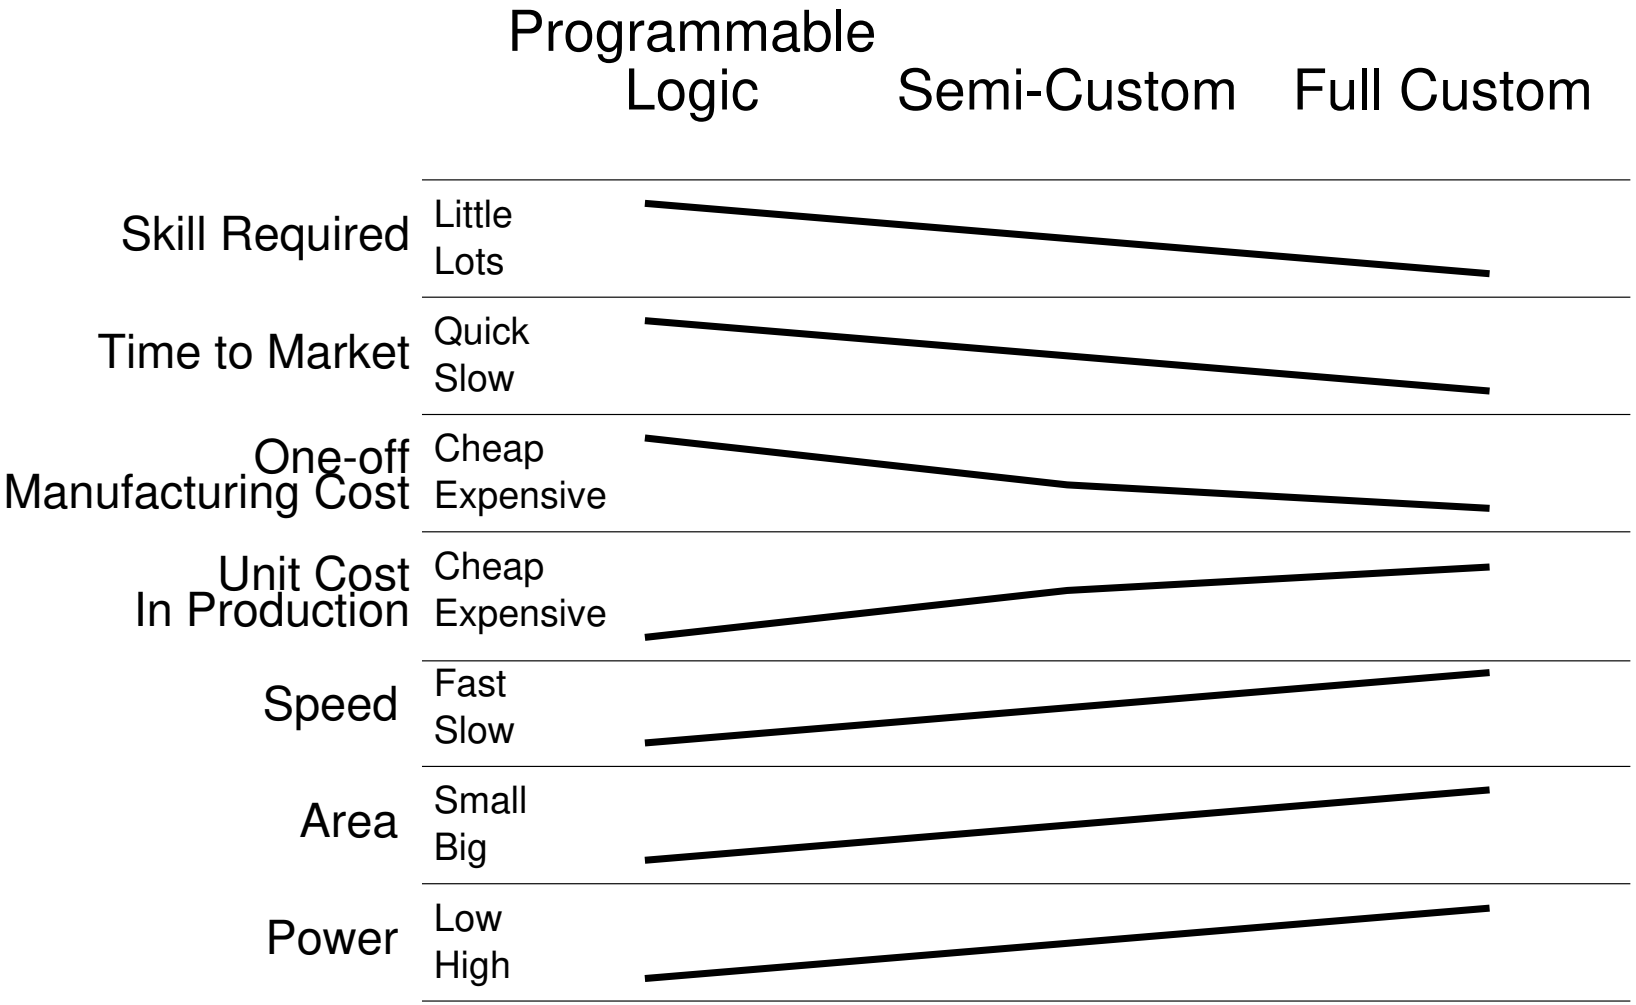

All design styles need full custom designers

A large ASIC (especially SoC) may mix Semi-Custom and Full Custom